

FENDT

Werkstatthandbuch

Workshopmanual

Manuel d'atelier

Manual de taller

Manuale per l'officina

Werkplaatshandboek

FENDT 900 Vario COM III

X 990.005.057.012

1

FENDT

A	General
B	Faults
C	Documents and Diagrams
D	Component location
E	Testing
F	Setting and Calibration
G	Repair
H	Service – Info

2210

Engine/crankcase

FENDT 900 Vario - COM III

Volume 1

0000	Overall system/tractor
1005	Overall system/transmission
1010	Transmission/differential
1015	Transmission/axle drive
1050	Transmission/housing
1070	Transmission / Brake system
1080	Transmission/drive train
1200	Transmission/front PTO
1220	Transmission / Live PTO
1320	Transmission/front wheel drive
2000	Overall system/engine
2010	Engine/cylinder head
2050	Engine/cooling
2060	Engine/fuel system
2210	Engine/crankcase
2312	Engine/lubrication
2400	Engine/exhaust system
2712	Engine/injectors
3000	Overall system/front axle
3120	Front axle/steering cylinder
3180	Front axle/cardan shaft

Volume 2

4000	Overall system/steering
4090	Steering system / hydraulic steering unit
5030	Vehicle layout/operator's seat
5500	Overall system/air conditioning system
8100	Overall system/cab
8610	Power lift/EPC electro-hydraulic control
8631	Power lift/hydraulic lift
8800	Overall system/compressed air system

Volume 3

9000	Overall system/electrical system
9015	Electrical system/starter lockout

FENDT 900 Vario - COM III

Volume 4

- 9410** Hydraulic pump installation/LS pump
- 9430** Hydraulic pump installation/steering pump
- 9534** Hydraulic piping/"Rüfa"reverse operation
- 9600** Overall system/hydraulic equipment
- 9605** Hydraulic equipment/hydraulic connections
- 9610** Hydraulic equipment/central control block (ZSB)
- 9620** Hydraulic equipment/valve fitting
- 9700** Overall system/electronics
- 9920** Service/special tools
- 9975** Service/SERDIA - Deutz engine diagnostics program


2210 Engine/crankcase

G **Repair.5**

G Repair

1 Crankcase air bleed: Deutz TCD 2013 7


1 Crankcase air bleed: Deutz TCD 2013

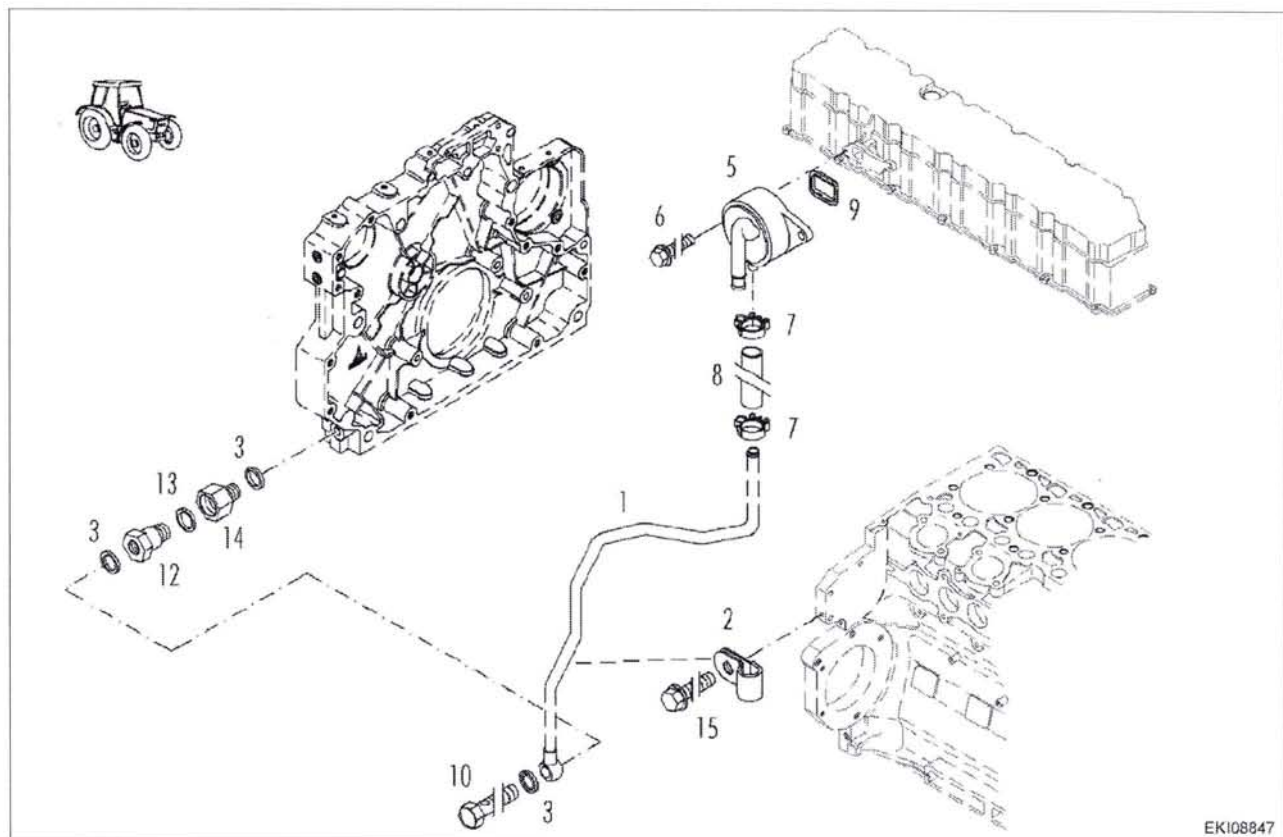

EKI08847

Fig. 1. 1003137

Item	Designation	Item	Designation
1	Return line	9	Gasket
2	Pipe clamp	10	Banjo bolt
3	Seal ring	12	Lock valve
5	Crankcase air bleed	13	Seal ring
6	Hex screw	14	Adapter
7	Hose clamp	15	Hex screw
8	Rubber hose		

 

Loosen hoses and remove crankcase air bleed


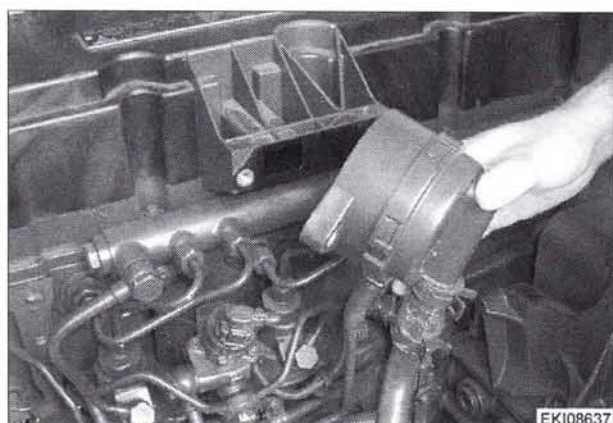


Fig. 2.

EKI08637
1002482

- | | | |
|------------------|------------------|------------------|
| 919 .. 0101-1000 | 925 .. 1001- | 934 .. 0101-1000 |
| 919 .. 1001- | 928 .. 0101-1000 | 934 .. 1001- |
| 922 .. 0101-1000 | 928 .. 1001- | |
| 922 .. 1001- | 931 .. 0101-1000 | |
| 925 .. 0101-1000 | 931 .. 1001- | |

 

Carefully unlock and open cover

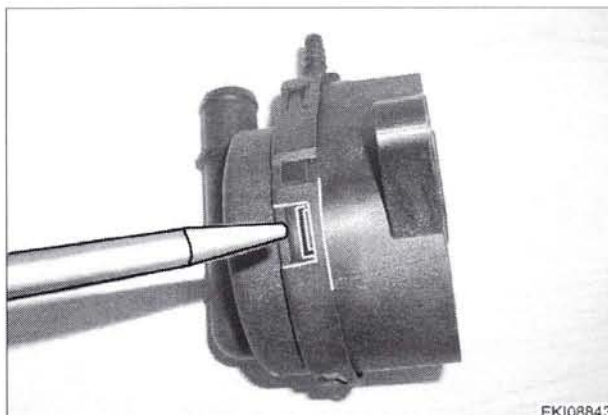


Fig. 3.

EKI08843

I003133


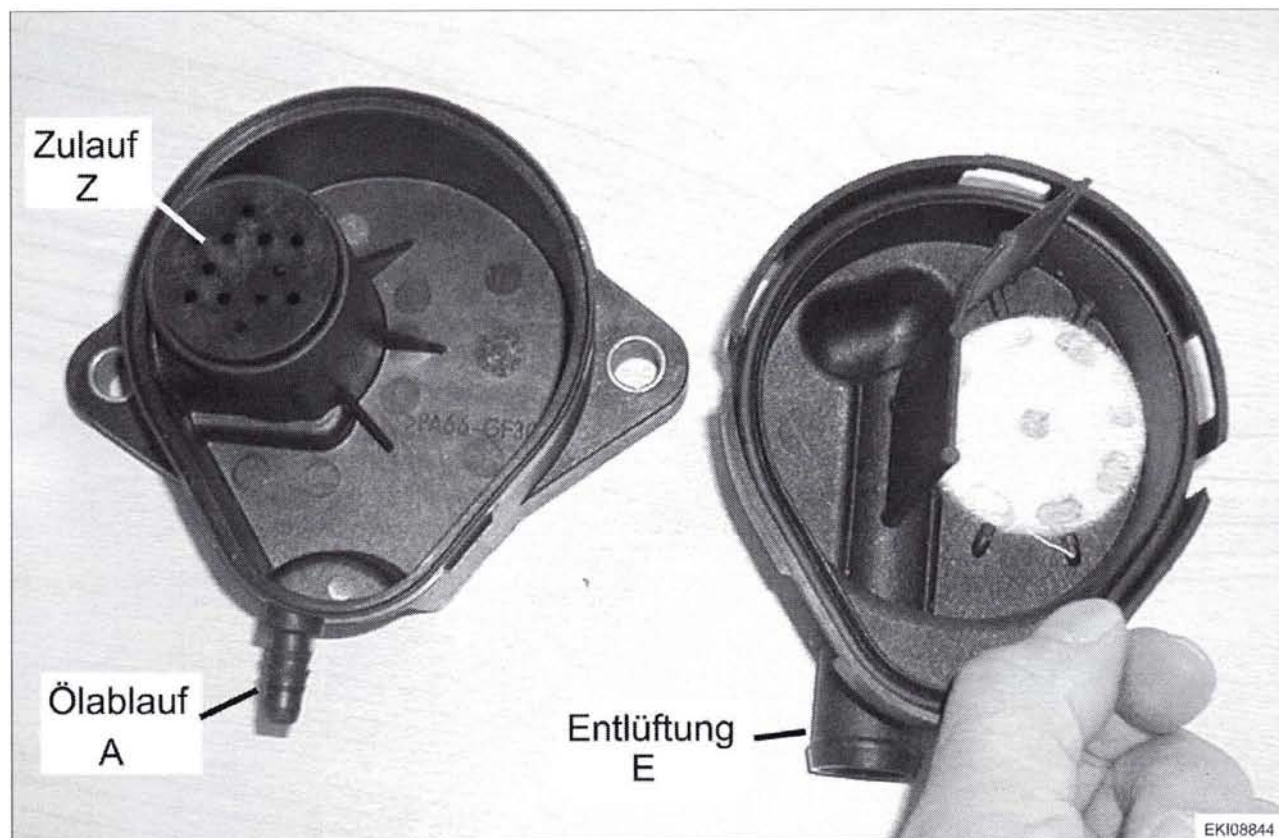


Fig. 4.

EKI08844

I003134

Item	Designation	Item	Designation
Z	Feed	E	Air bleed (to the atmosphere)
A	Engine oil drain to the crankcase		

 


Lightly oil the O-ring and insert it in the groove



Fig. 5.

 EKI08845
I003135



Lock the cover


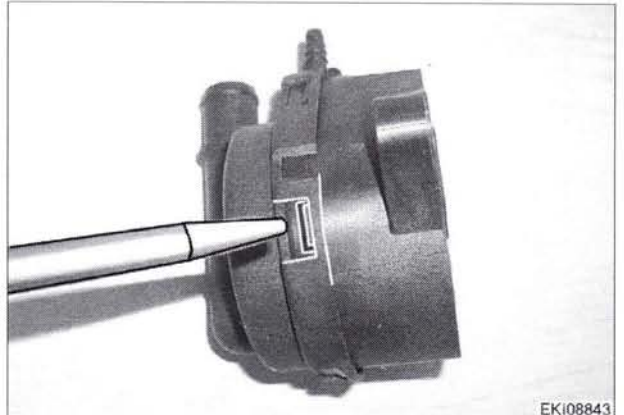


Fig. 6.

 EKI08843
I003133



Lightly oil the seal and insert it in the groove


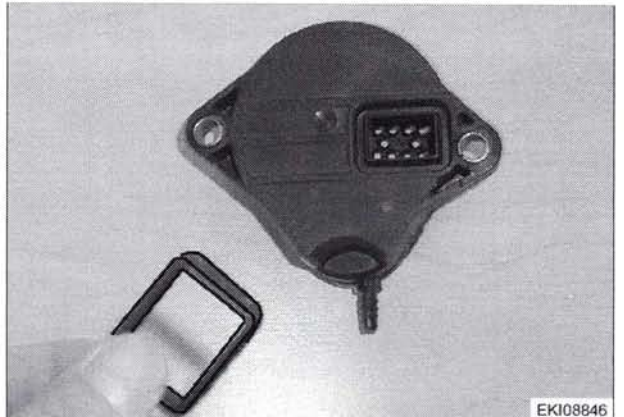


Fig. 7.

 EKI08846
I003136



Install crankcase air bleed, attach hoses

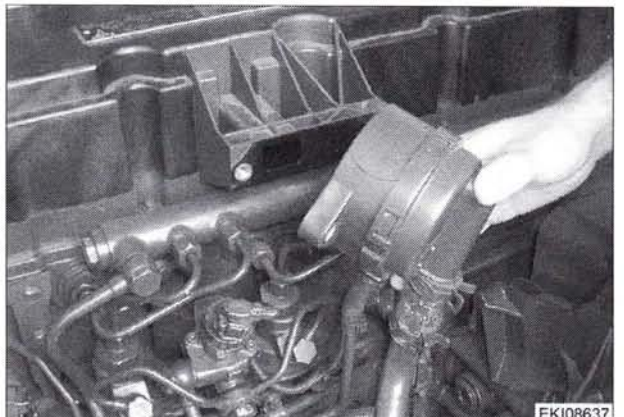


Fig. 8.

EKI08637
I002482

919 .. 0101-1000
919 .. 1001-
922 .. 0101-1000
922 .. 1001-
925 .. 0101-1000

925 .. 1001-
928 .. 0101-1000
928 .. 1001-
931 .. 0101-1000
931 .. 1001-

934 .. 0101-1000
934 .. 1001-

